
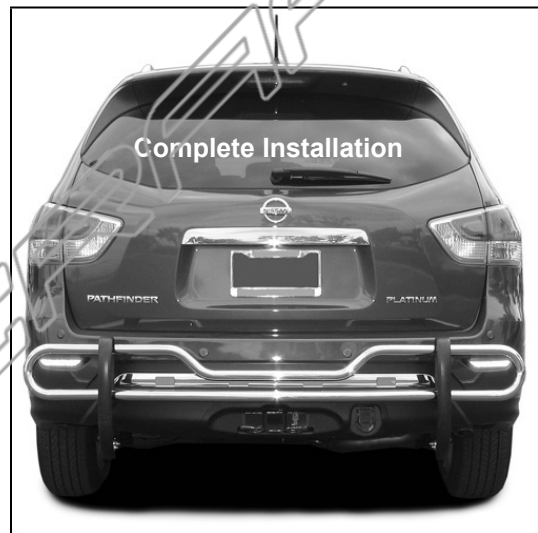


PARTS LIST:

Qty	Description	Qty	Description
1	Double Tube Rear Bumper Guard	8	12mm x 32mm OD x 3mm Large Flat Washers
1	Driver/Left Frame Mounting Bracket	4	12mm x 24mm OD x 2.5mm Flat Washers
1	Passenger/Right Frame Mounting Bracket	4	12mm Lock Washers
4	12-1.25mm x 35mm Special Fine Thread Hex Bolts	4	12-1.75mm Nylon Lock Nuts
4	12-1.75mm x 35mm Hex Bolts		

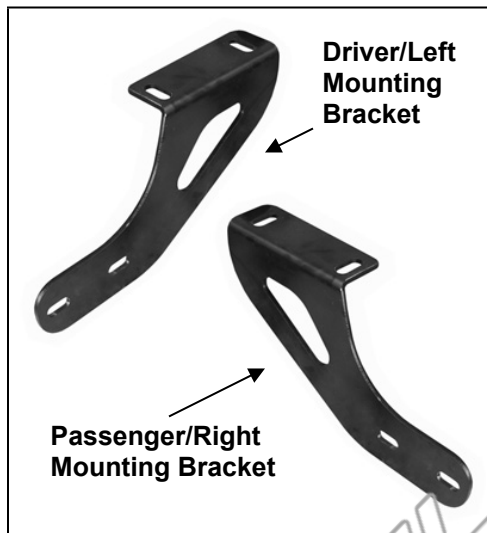

PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- 2. IMPORTANT! The Frame Brackets install very close to the exhaust. Allow exhaust to cool completely before starting the installation.**
3. From under the rear of the driver side of the vehicle, locate the two 12-1.25mm threaded holes in the bottom of each frame rail near the rear bumper. **NOTE:** Remove (2) factory hex bolts if vehicle is equipped with tow package. Brackets will install over tow hitch bracket.
4. Select the driver side Frame Bracket. Hang the Bracket from the (2) factory threaded holes using the factory tow hitch hardware if equipped or the included (2) 12-1.25mm x 35mm **Special Fine Thread** Hex Bolts, (2) 12mm Lock Washers and (2) 12mm Flat Washers, (**Figure 1**).
5. Repeat **Steps 3 - 4** for passenger side Bracket installation, (**Figure 2**).
6. With assistance, position the Rear Bumper Guard up to the inside of the Mounting Brackets. Bolt the Bumper Guard to the Brackets with the included (4) 12-1.75mm x 35mm Coarse Thread Hex Bolts, (8) 12mm Flat Washers and (4) 12mm Nylon Lock Nuts, (**Figures 2 & 3**). Do not tighten hardware at this time.
7. Level and align the Rear Bumper Guard properly and tighten all hardware.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Warning: Rear Bumper Guard is not designed to be used as an anchor point for trailer safety chains. Follow the manufacturer's instructions for attaching trailer safety chains to the factory loops on the tow hitch. Do not attach the safety chains to any part of the Rear Bumper Guard.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Rear Bumper Guard.


For gloss black finishes: Mild soap may be used to clean the product.

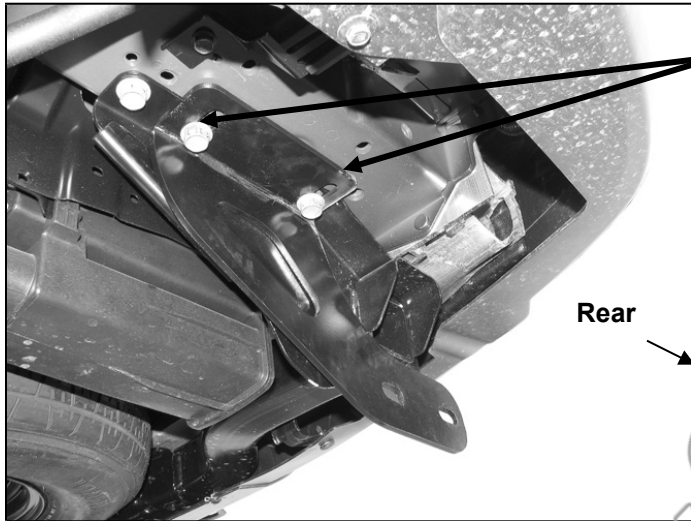


(Fig 1) Driver side pictured. Bolt Brackets to factory threaded holes in bottom of frame channel

Use the factory hardware from the tow hitch kit if equipped or:
(2) 12-1.25mm x 30mm Special Fine Thread Hex Bolts
(2) 12mm Lock Washers
(2) 12mm Flat Washers

(2) 12-1.75mm x 35mm Coarse Thread Hex Bolts
(4) 12mm Flat Washers
(2) 12mm Nylon Lock Nuts

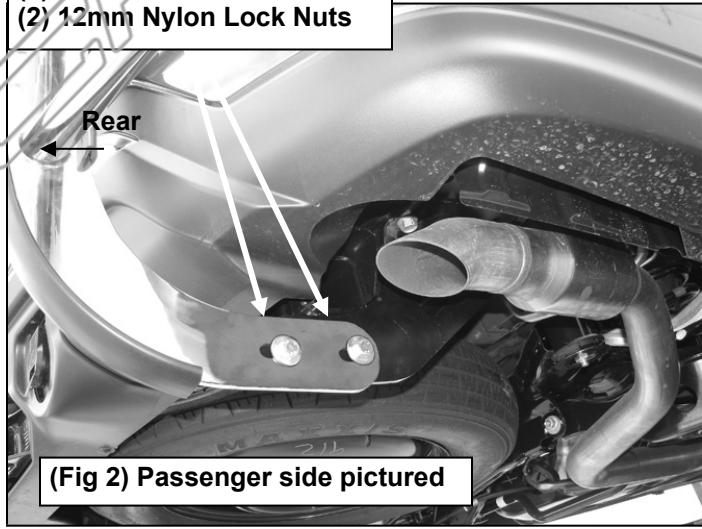

(Fig 2) Passenger side pictured

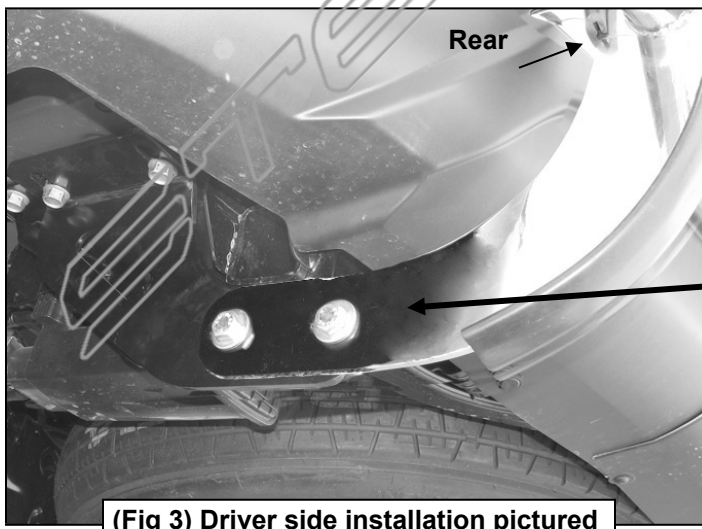

(Fig 3) Driver side installation pictured

(2) 12-1.75mm x 35mm Coarse Thread Hex Bolts
(4) 12mm Flat Washers
(2) 12mm Nylon Lock Nuts