


RAM SUPPLEMENTAL INSTRUCTIONS FOR MODELS WITH PRODUCTION DATE 5/2015-ON

ADDITIONAL PARTS LIST:


Description
8-1.25 x 25mm Hex Bolts (quantity determined by application)
8mm x 24mm Flat Washers (quantity determined by application)
8mm Lock Washers (quantity determined by application)

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ PRIMARY AND SUPPLEMENTAL INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Starting at the driver side-front of the vehicle, remove the sealing tape covering the factory holes on the side of the inner panel, **(Figures 1 & 2)**.
3. Insert the Bolt and Nut Plate into the factory oval hole as per primary instructions. Continue to thread the Plastic Retainer down the Bolt and Nut Plate until it is flush against the sheet metal, **(Figure 3)**. **NOTE:** When properly installed, the Plastic Retainer is designed to prevent the Bolt and Nut Plate from falling into the body panel during installation.
4. Select the driver side front Mounting Bracket. Attach the top slot in the Bracket to the Bolt and Nut Plate with (1) 12mm Flat Washer, (1) 12mm Lock Washer and (1) 12mm Hex Nut as per primary instructions, **(Figure 4)**. Do not tighten hardware at this time.
5. Line up the remaining hole in the Mounting Bracket with the factory threaded hole in the inner body panel. Attach the Bracket to the threaded hole with (1) 8mm x 30mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm Flat Washer, **(Figure 5)**. Snug but do not tighten hardware.
6. Repeat **Steps 2—5** for all remaining Mounting Bracket installations when equipped with pre-installed factory threaded inserts or weld nuts in the body panel, **(Figures 2 & 3)**.
7. Refer to primary instructions included in the bracket kit for rest of installation.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

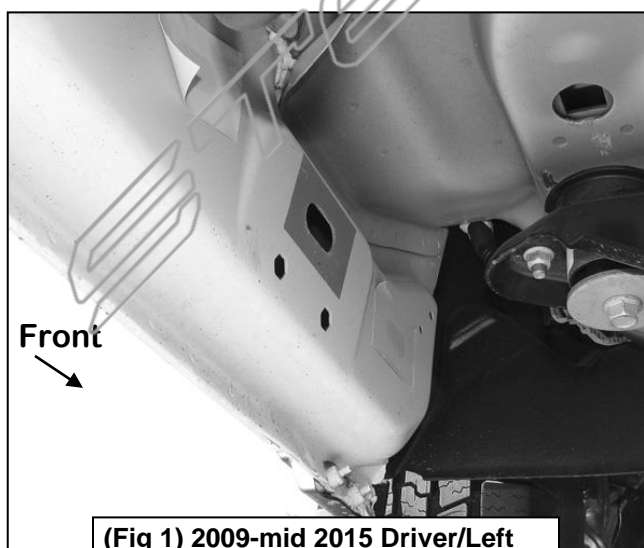


(Fig 1) 2009-mid 2015 Driver/Left front mounting location

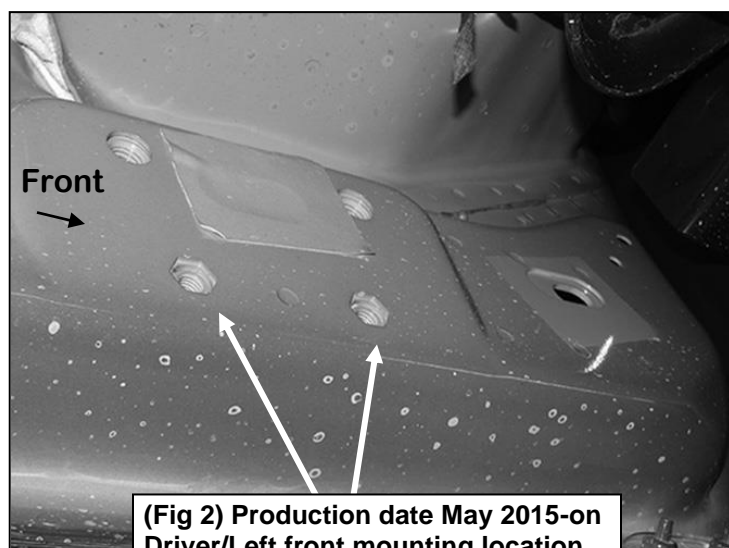


(Fig 2) Production date May 2015-on Driver/Left front mounting location. Note 8mm factory threaded holes

12mm Bolt and Nut Plate with
Plastic Retainer installed on
May 2015-on model

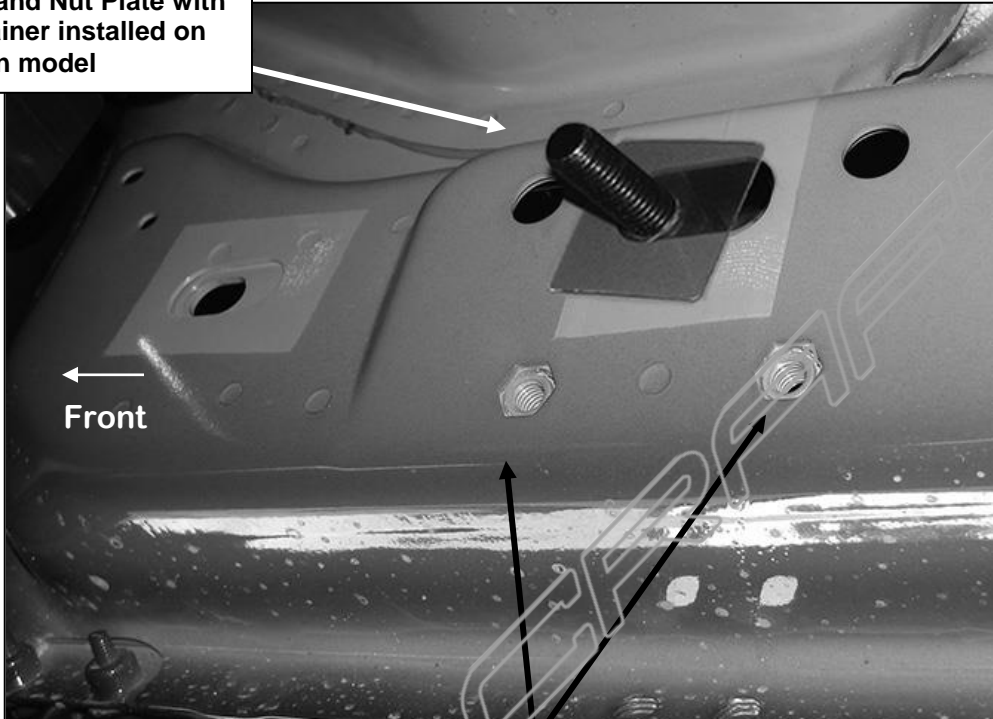


(Fig 3) May 2015-on Passenger/right front mounting location. Note 8mm factory threaded weld nuts require included 8mm hardware to complete installation

Replace 10mm Hex Bolt and
Washers from bracket kit with the
included:
8mm x 25mm Hex Bolts
8mm Flat Washers
8mm Lock Washers
Repeat for any location as required

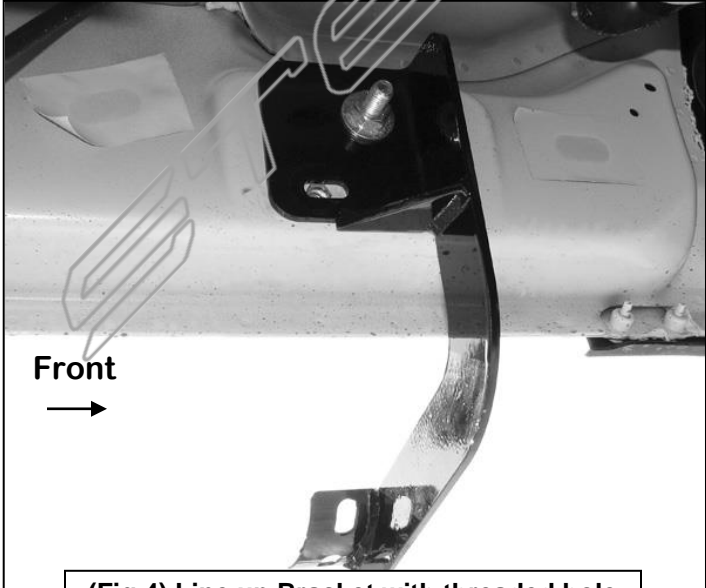

(Fig 4) Line up Bracket with threaded hole

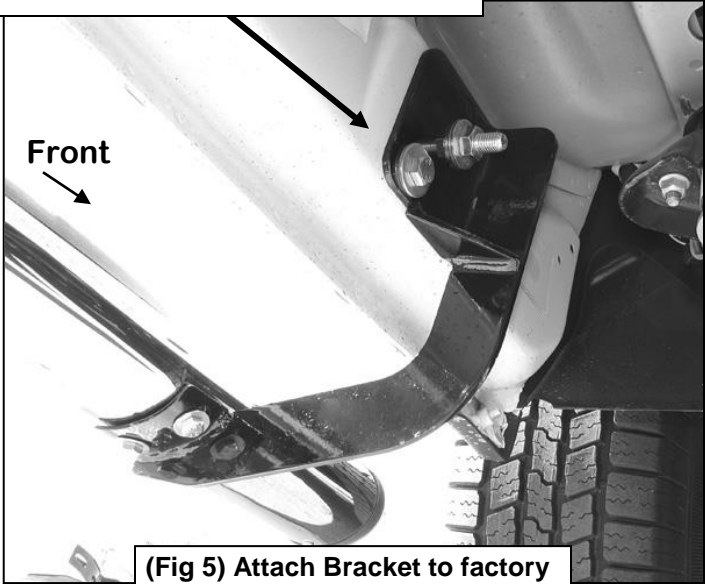

(Fig 5) Attach Bracket to factory threaded hole as required