


**EVO3 RUNNING BOARD
2015 CHEVY COLORADO/GMC CANYON CREW CAB**

PARTS LIST:

1	Driver/left Running Board	12	8-1.25mm x 25mm Hex Bolts
1	Passenger/right Running Board	12	8mm x 24mm x 2mm Flat Washers
12	8-1.25mm Clip-On Nuts	12	8mm Lock Washers

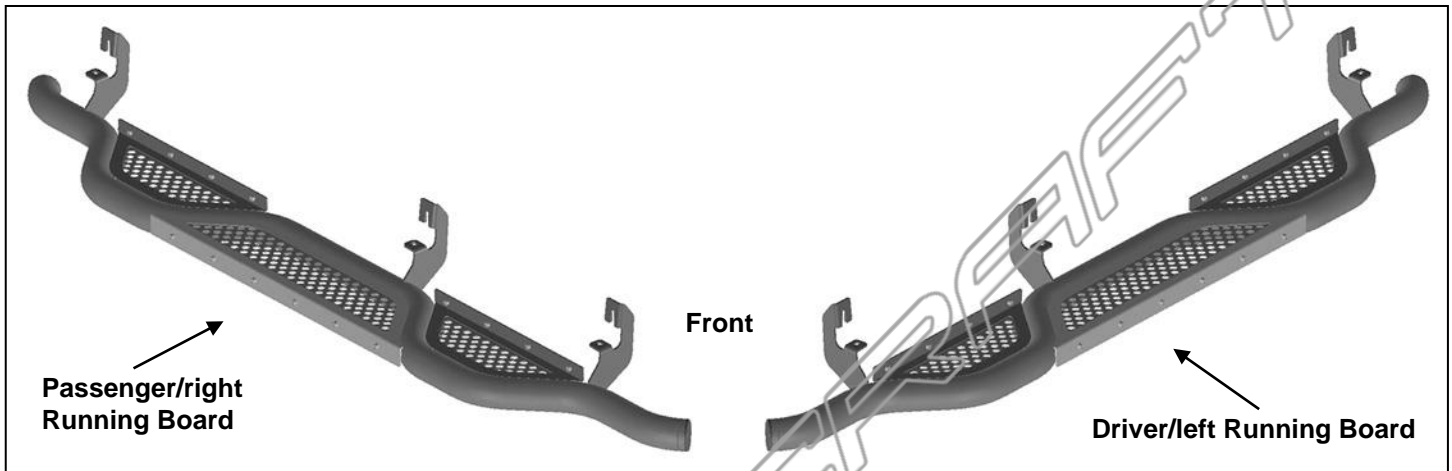

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

1. Start the installation under the driver side of the vehicle. Locate the 4 factory running board mounting locations along the bottom and inner side of the body, **(Figure 1)**. The Running Board assembly will attach to the 1st, 2nd and 4th mounting locations. **NOTE:** It may help to hold the driver/left side assembly up in place to help determine the mounting holes to use along the bottom and inner side of the body.
2. Starting at the front of the driver side, remove the rubber plugs as necessary covering the mounting holes, **(Figure 1)**. Select (1) 8mm Clip Nut. Slide the Clip Nut into the large hole and over the smaller hole next to it in the bottom of the body panel. Line up threaded nut on the Clip Nut with smaller hole, **(Figure 2)**. Repeat this Step to install an 8mm Clip Nut in the top mounting location directly above.
3. Move to the center (2nd) mounting location. Repeat **Steps 1 & 2** to install the 8mm Clip Nuts in the center mounting location, **(Figure 2)**. Repeat to install the (2) 8mm Clip Nuts in the last location at the back of the cab, **(Figure 3)**.
4. Select the driver/left side EVO3 Running Board. Attach the Running Board to the (6) Clip Nuts with (6) 8mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Flat Washers, **(Figures 3 & 4)**. Snug but do not fully tighten the hardware.
5. Level and adjust the Running Board and tighten all hardware. Torque 8mm fasteners to 18-20ft-lbs.
6. Repeat **Steps 1—5** for passenger side Running Board installation.
7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Running Board.

Driver/left Side Installation Pictured

