

INSTALLATION INSTRUCTIONS

TAILLIGHT GUARD

94-01 DODGE RAM 1500 / 94-02 DODGE RAM 2500/3500

PART # 32020

PARTS LIST:

1	Driver/Left Taillight Guard	6	ST4 x 20mm Sheet Metal Screws
1	Passenger/Driver Taillight Guard	6	4mm ID x 9mm OD x 1mm Flat Washers



PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- Open the tailgate and position the driver Taillight Guard over taillight housing. Center and align the Taillight Guard; then use the holes on the mounting tabs as a template to mark the drilling location on the vehicle (**Figure 1**).
- Remove the Taillight Guard and set aside.
- Center punch the marked locations, then use a 1/8" drill bit to drill the marked locations (**Figure 2**).
IMPORTANT: Any cutting tool may break or shatter. Government regulations require safety glasses & equipment at all times when drilling.
- Reposition the Taillight Guard back onto the taillight housing. Align the previously drilled holes with holes on the mounting tabs.
- Attach Taillight Guard to vehicle using the included (3) ST4 x 20mm Sheet Metal Screws and (3) 6mm Flat Washers (**Figure 3**). Tighten screws all the way. **NOTE:** Do not over tighten screws or a pull out may occur.
- Repeat steps 2-6 for passenger side Taillight Guard.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.
For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

(Driver Side Installation Shown)

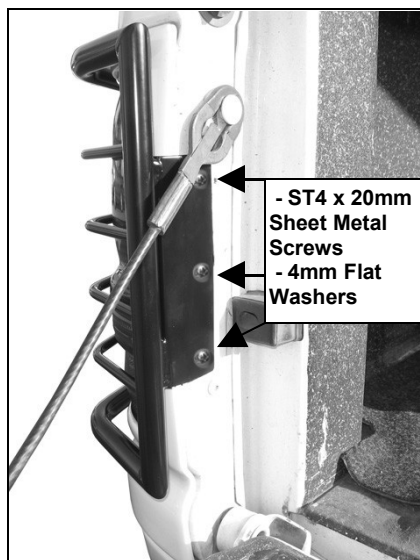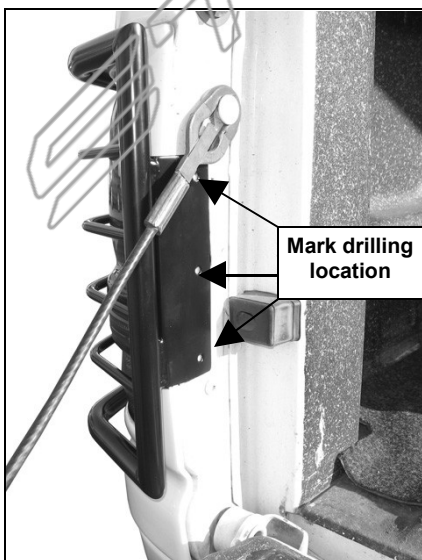

STEELCRAFT