


PARTS LIST:

1	DS(left) Sidebar	12	8-1.25mm x 30mm Hex Bolts
1	PS(right) Sidebar	12	8mm Lock Washers
6	8-1.25mm Lock Nuts	12	8mm x 24mm OD x 2mm Flat Washers

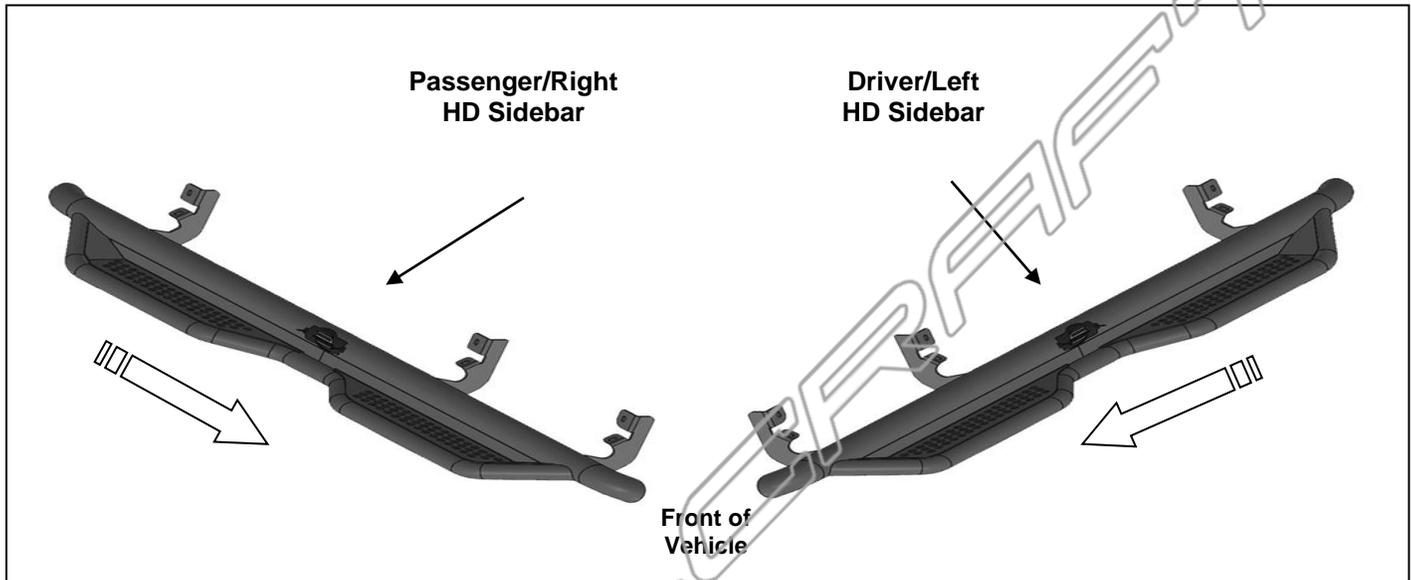

PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- Start installation at the front of the driver side of the vehicle and locate the factory threaded stud and the threaded hole located on the side of the inner body panel, **(Figure 1)**. **NOTE:** Remove the plastic plug or any insulation on the side panel to locate the threaded holes.
- Attach the upper hole of the bracket to the threaded stud with (1) 8mm x 24mm Flat Washer and (1) 8mm Lock Nut. Next, insert (1) 8mm x 30mm Hex Bolt with (1) 8mm Lock Washer and (1) 8mm x 24mm Flat Washer through the remaining lower hole in the Bracket and into the threaded hole, **(Figure 2, 3 & 4)**. **NOTE:** For vehicle years 2016 and above, bolt the sidebar to the mounting location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Figure 5 & 6)**. Snug but do not fully tighten the hardware at this time.
- Level and adjust the Sidebar and tighten all hardware.
- Repeat **Steps 1—4** to install the Passenger/right Sidebar.
- Do periodic inspections of the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

Driver Side Installation Pictured

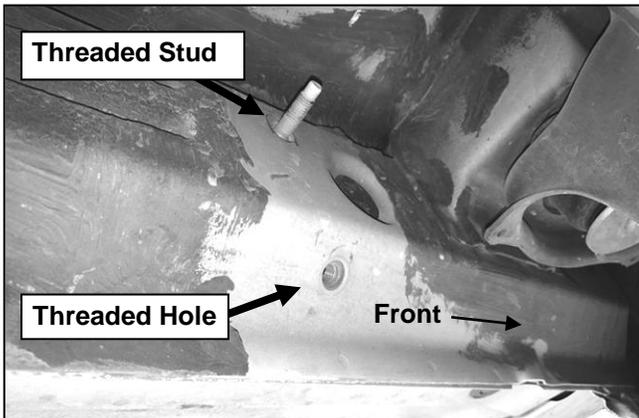


(Fig 1) Driver side Front mounting location pictured. Note: Remove plastic plugs to locate factory threaded holes




(Fig 2) Driver side Center mounting location pictured for upper hole

8mm x 24mm Flat Washer
8mm Lock Nut

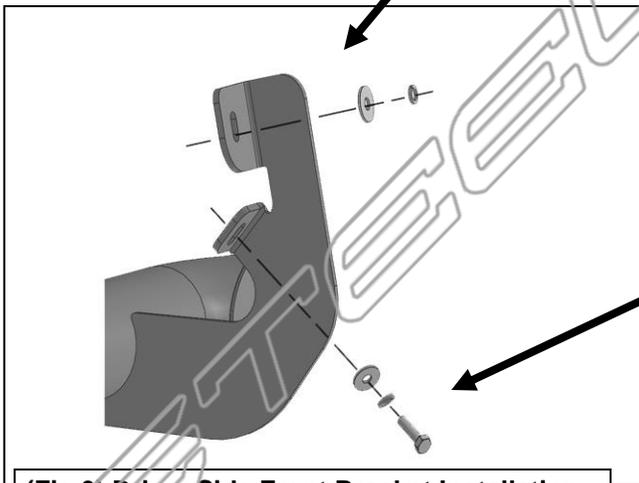


(Fig 3) Driver Side Front Bracket Installation of parts

8mm x 30mm Hex Bolt
8mm Lock Washer
8mm x 24mm Flat Washer

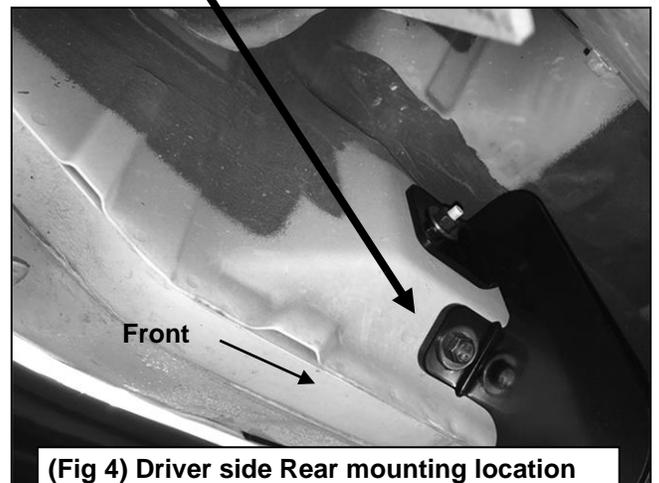


(Fig 4) Driver side Rear mounting location pictured for lower hole

Driver Side Installation Pictured Continued

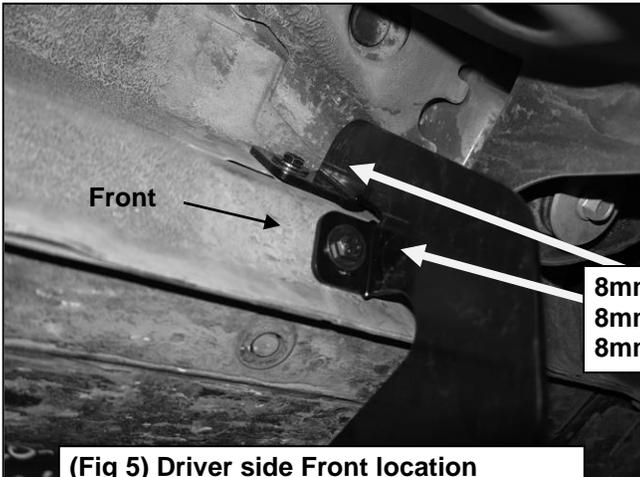

(Fig 5) Driver side Front location pictured

- 8mm x 30mm Hex Bolt
- 8mm Lock Washer
- 8mm x 24mm Flat Washer

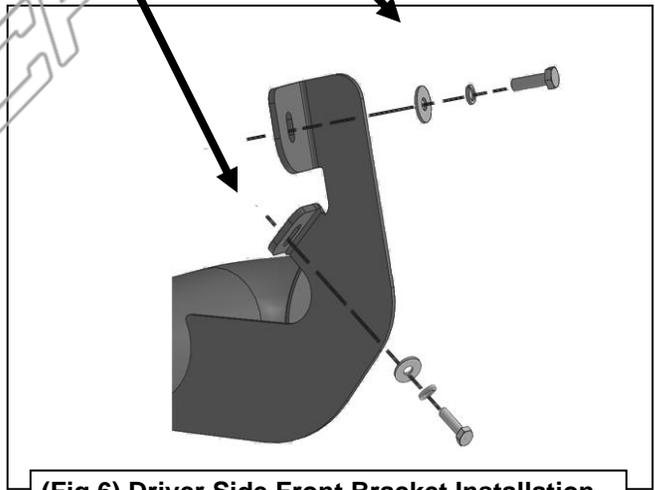

(Fig 6) Driver Side Front Bracket Installation of parts for Vehicle years 2016 and above



Final Installation