


**ALUMINUM REAR FENDER LINERS  
2007-18 JEEP WRANGLER JK 2 AND 4-DOOR**

**PARTS LIST:**

1	Driver/Left Rear Fender Liner	8	6mm Lock Washers
1	Passenger/Right Rear Fender Liner	12	6mm x 18mm OD x 1.6mm Flat Washers
8	6-1.0mm x 20mm Hex Bolts	4	6mm Flange Nuts

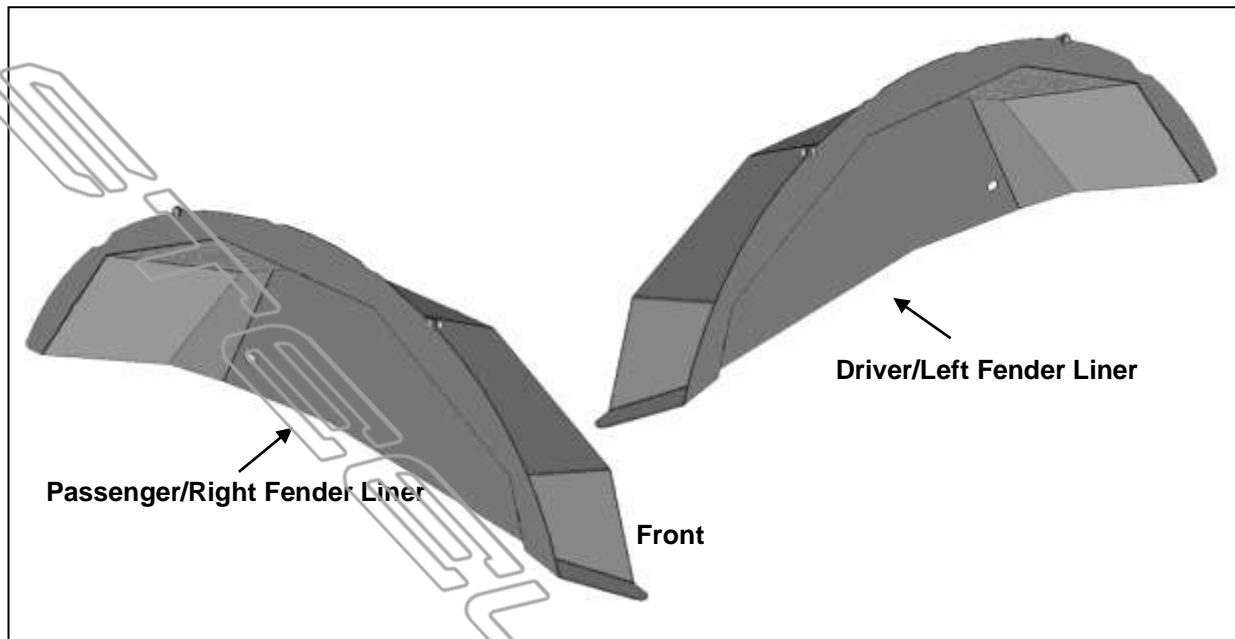

**PROCEDURE:**


**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.**

1. Start installation on the passenger/right side of the vehicle. Remove the plastic liner if equipped, **(Figure 1)**. **NOTE:** Fender Liners are designed to be installed with Steelcraft and most aftermarket fenders only. Install fender before installing Liner**(Figure 2)**.
2. Release the clip attaching the breather at the rear of the wheel opening, **(Figure 3)**. Relocate the breather for clearance to install liner.
3. Select the passenger/right rear Fender Liner. Insert the Liner over the tire and back into position behind body panel. **NOTE:** It may be slightly easier to install Liner with vehicle raised and tire removed.
4. Attach the top of the Liner to the (2) holes in the body and aftermarket fender with (2) 6mm x 20mm Hex Bolts, (2) 6mm Lock Washers and (2) 6mm Flat Washer, **(Figures 4 & 5)**. **NOTE:** Mounting holes in the Fender Liner line up with existing holes in the body panel and aftermarket fenders. Leave hardware loose at this time.
5. Attach the bottom of the Liner to the mounting holes in the body with (2) 6mm Hex Bolts, (4) 6mm Flat Washers, (2) 6mm Lock Washers and (2) 6mm Hex Nuts, **(Figures 4 & 5)**. Do not tighten hardware.
6. Level and adjust Fender Liner and tighten at hardware.
7. Repeat **Steps 1—6** to attach the driver/left Fender Liner.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment,** Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Fender Liners.

**ALUMINUM REAR FENDER LINERS  
2007-18 JEEP WRANGLER JK 2 AND 4-DOOR**

**Passenger/right Side Installation Pictured**

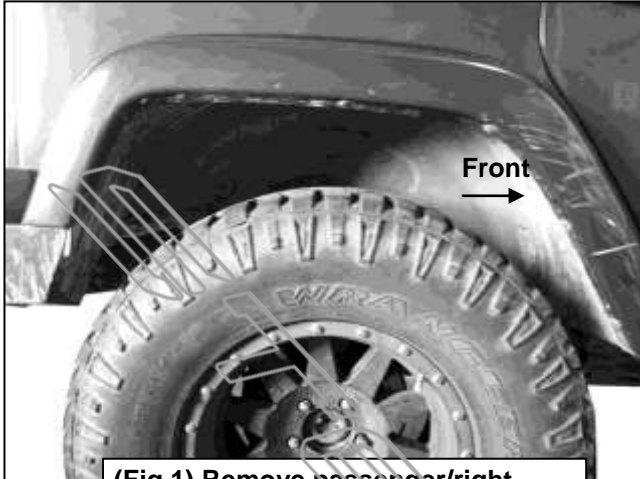

**(Fig 1) Remove passenger/right plastic fender liner if installed**




**(Fig 2) Fender and plastic liner pictured removed for instruction purposes only. Install aftermarket fender before installing Fender Liners**




**(Fig 3) On passenger/right side, relocate vent rear**

- 6mm Hex Bolt
- 6mm Lock Washer
- 6mm Flat Washer
- 6mm Hex Bolt
- (2) 6mm Flat Washers
- 6mm Lock Washer
- 6mm Hex Nut

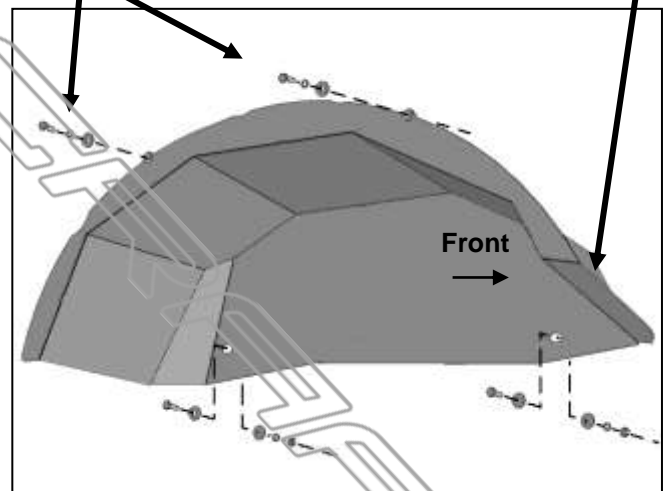

**(Fig 4) Attach Fender Liner to existing holes in aftermarket fender (top) and body panel (bottom)**

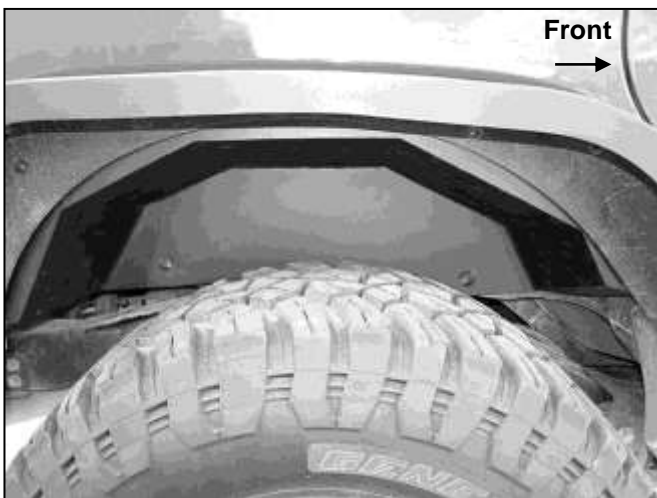

**(Fig 5) Passenger/right Fender Liner installed**