

INSTALLATION INSTRUCTIONS
TAILIGHT GUARD
06-10 HUMMER H3

STEELCRAFT

**TAILLIGHT GUARD
06-10 HUMMER H3**

PART LIST

- 2- SUPPORT BRACKETS
- 2- # 6 x 1/2 SCREWS
- 4- 1/4 FLAT WASHERS

STEP 1. UNSNAP REAR PLASTIC CAP TO ACCESS THE EXISTING SCREW. PROCEED TO LOC
SCREW ONLY DO NOT REMOVE (SUPPORT BRACKET WILL SLIDE ONTO THE EXIS
SCREW) DRIVER SIDE SHOWN – REPEAT ON PASSENGER

STEP 2. PULL ON REAR PLASTIC MOLDING JUST ENOUGH TO SLIDE SUPPORT BRACKET
ATTACH TO THE EXISTING SCREW.
DRIVER SIDE SHOWN – REPEAT ON PASSENGER

STEP 3. SNUG TIGHT SUPPORT BRACKET TO THE EXISTING SCREW.
DRIVER SIDE SHOWN – REPEAT ON PASSENGER

STEP 4. REMOVE THE EXISTING SCREWS ATTACHING TAIL LIGHT LENS (THIS WILL ALL
ANGLE THE TAIL LIGHT LENS ON DRIVER SIDE ONLY.)
DRIVER SIDE SHOWN – REPEAT ON PASSENGER

STEP 5. ATTACH TAILLIGHT GUARD (REAR DOOR MUST BE HALF WAY OPEN AND TAIL I
LENS MUST BE AN ANGLE POSITION TO ALLOW TAILLIGHT GUARD TO SLIDE OI
SIDE ONLY.) DRIVER SIDE SHOWN – REPEAT ON PASSENGER

STEP 6. PROCEED TO TIGHTEN EXISTING SCREWS PREVIOUSLY REMOVED.
DRIVER SIDE SHOWN – REPEAT ON PASSENGER


STEP 7. TIGHTEN EXISTING SCREW THROUGH THE REAR PLASTIC MOLDING HOLE.
(LEAN BRACKET 1/8” TO THE LEFT AND TIGHTEN DRIVER SIDE ONLY.)
DRIVER SIDE SHOWN – REPEAT ON PASSENGER

STEP 8. TIGHTEN SUPPORT BRACKET TO THE TAILLIGHT GUARD USING # 6 x 1/2 SCREW
(IT MAY BE NECESSARY TO PULL ON TAILLIGHT GUARD SLIGHTLY TO THE LEFT
LINE UP BOTTOM HOLE ON TAILLIGHT GUARD ON DRIVER SIDE ONLY.)
DRIVER SIDE SHOWN – REPEAT ON PASSENGER


**TAILLIGHT GUARD
06-10 HUMMER H3**



Step 1

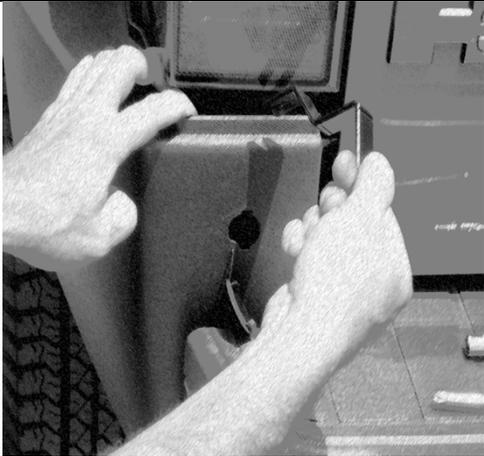

Step 2

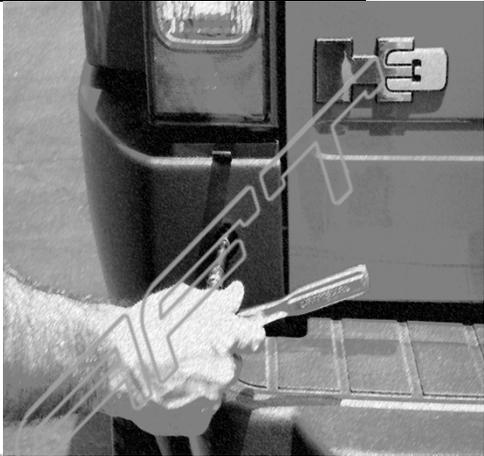

Step 3



Step 4



Step 5



Step 6



Step 7



Step 8



Passenger Side Shown