


**4" OVAL STRAIGHT SIDE BARS  
05-11 TACOMA DOUBLE CAB**

**PARTS LIST:**

|   |   |    |  |
|---|---|----|--|
| 1 | Driver Sidebar                          | 12 | 8-1.25mm x 30mm Hex Bolts              |
| 1 | Passenger Sidebar                       | 12 | 8-1.25mm x 25mm Hex Bolts              |
| 1 | Driver/Left Front Mounting Bracket      | 12 | 8mm x 28mm OD x 3mm Large Flat Washers |
| 1 | Passenger/Right Front Mounting Bracket  | 12 | 8mm x 24mm OD x 2mm STD Flat Washers   |
| 1 | Driver/Left Middle Mounting Bracket     | 24 | 8mm Lock Washers                       |
| 1 | Passenger/Right Middle Mounting Bracket |    |  |
| 1 | Driver/Left Rear Mounting Bracket       |    |  |
| 1 | Passenger/Right Rear Mounting Bracket   |    |  |

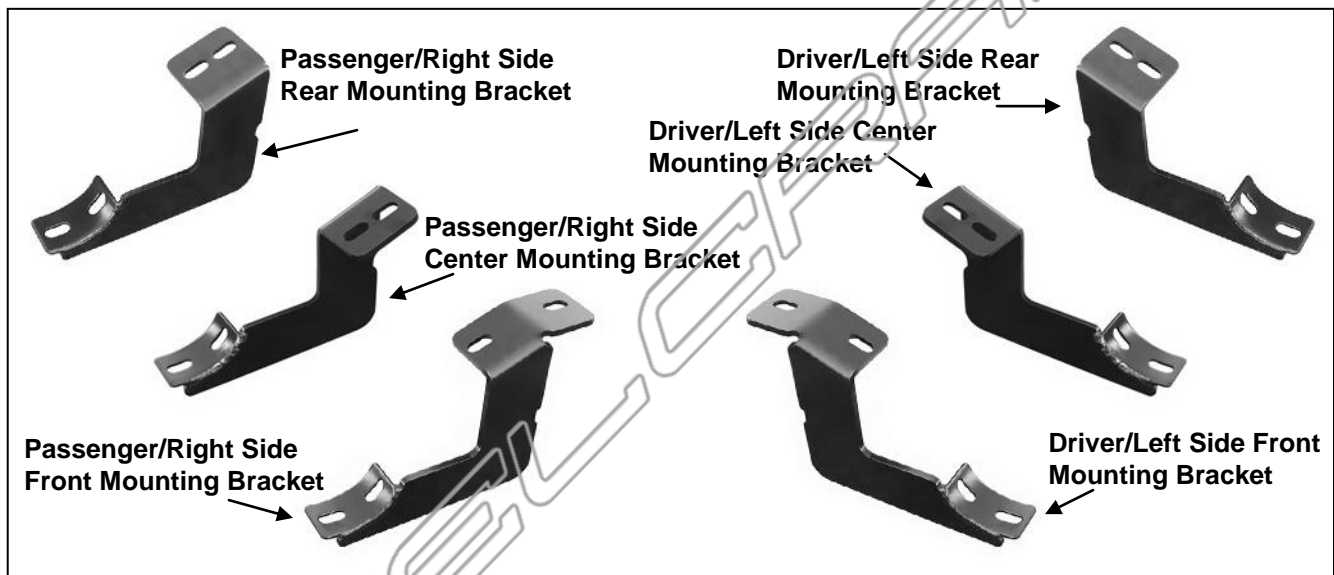

**PROCEDURE:**

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- Starting on the driver side front of the vehicle, use a flat screw driver to remove the plastic plugs. Partially attach driver side front Mounting Bracket to vehicle using the included (2) 8mm x 30mm Hex Bolts, (2) 8mm Lock Washers, and (2) 8mm x 28mm x 3mm Large Flat Washers. Repeat this step for center and rear Mounting Bracket installation.
- Carefully place the driver Sidebar onto the Brackets. Align the threaded inserts in the bottom of the Side Bar with the slots on the Mounting Brackets. Attach the Sidebar to the Mounting Brackets with the included (6) 8mm x 25mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm x 24mm OD x 2mm STD Flat Washers. Do not tighten hardware at this time.
- Level and adjust the Sidebar properly and tighten all hardware.
- Repeat Steps 2-4 for passenger Sidebar installation.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.


**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.


**4" OVAL STRAIGHT SIDE BARS  
05-11 TACOMA DOUBLE CAB**

**Driver Side Installation Pictured**

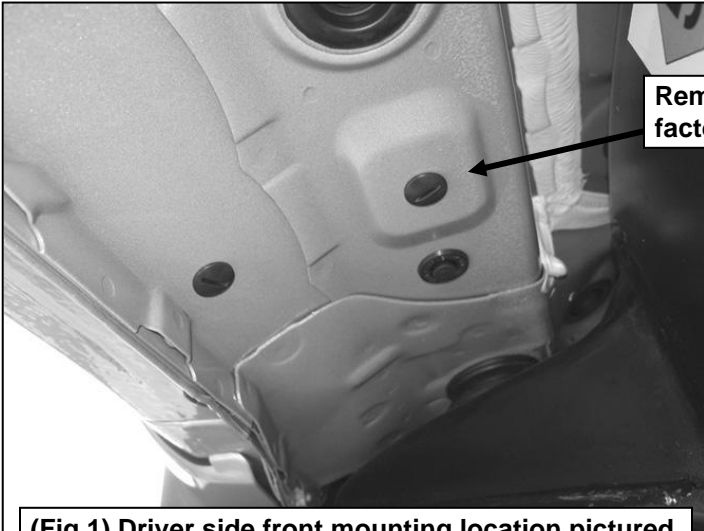


Remove plastic plugs or factory hex bolts (if equipped)

- (2) 8mm x 30mm Hex Bolts
- (2) 8mm x 28mm Large Flat Washers
- (2) 8mm Lock Washers

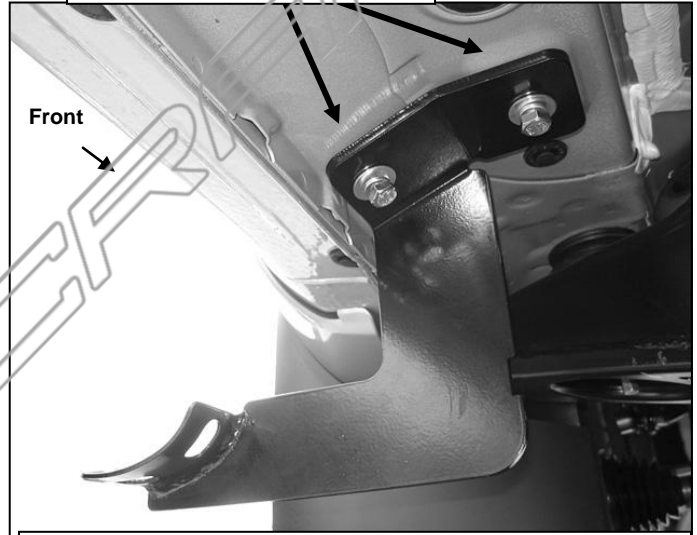


**(Fig 2) Driver side front mounting location pictured**

- (2) 8mm x 30mm Hex Bolts
- (2) 8mm x 28mm Large Flat Washers
- (2) 8mm Lock Washers

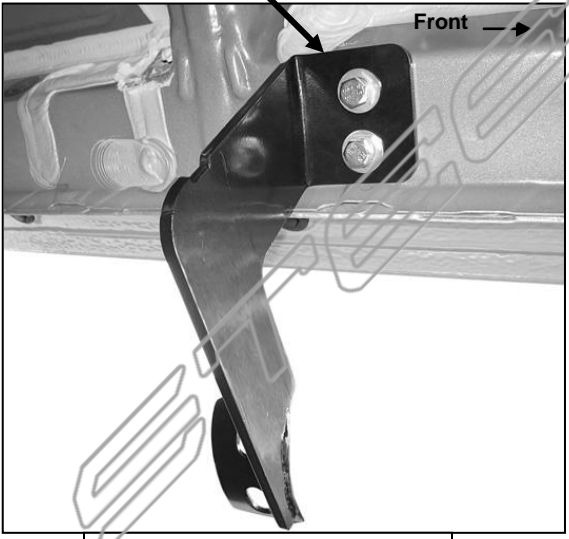

**(Fig 3) Driver side center mounting location pictured**

- (2) 8mm x 30mm Hex Bolts
- (2) 8mm x 28mm Large Flat Washers
- (2) 8mm Lock Washers

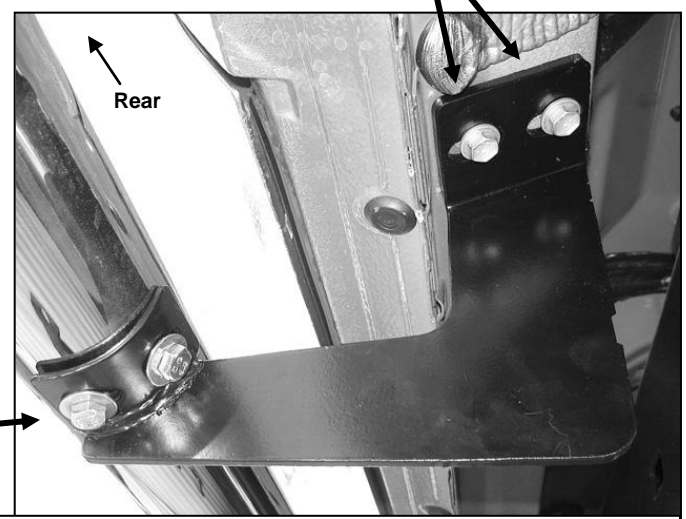

**(Fig 4) Driver side rear mounting location pictured**

- (2) 8mm x 25mm Hex Bolts
- (2) 8mm x 24mm STD Flat Washers
- (2) 8mm Lock Washers