

**INSTALLATION INSTRUCTIONS
GRILLE GUARD WITH WINTCH MOUNT
06-10 HUMMER H3 / 09-10 HUMMER H3T
PART NUMBER**

STEELERAFET

**GRILLE GUARD WITH WINTCH MOUNT
06-10 HUMMER H3 / 09-10 HUMMER H3T**


PARTS LIST:

1	Front Guard	2	8mm Corn Nuts
2	8-1.25mm x 20mm Allen Bolts	2	Support Brackets
4	8mm Flat Washers	2	Rubber Spacers

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- Remove factory tow hooks and set aside. **NOTE:** In order to get to the mounting factory tow hook bolts, you would need to remove the bolt holding the loop (Figure 1).
- With assistance position Front Guard onto vehicle. As you position the Front Guard onto vehicle place a rubber spacer on the mounting location between bumper and Front Guard, this will protect the finish on the bumper.
- Attach Front Guard and tow hooks to the bumper with factory bolts removed in step two (Figure 2). Do not tighten at this time. **CAUTION:** Do not attempt to install Front Guard by yourself; doing so, you may damage the finish on the vehicle.
- Remove the factory bolt located on the outer air intakes (Figure 3). Save bolts for later use.
- Position passenger side Support Bracket as shown in Figure 3. Attach it with factory bolt removed in step 5. Do not tighten at this time.
- Align hole on the Support Bracket with hole on the Front Guard Plate and attach them together with the included (1) 8-1.25mm x 20 mm Allen Bolt, (2) 8mm Flat Washers, and (1) 8mm Corn Nut (Figure 4). Do not tighten at this time.
- Repeat steps 5-7 for driver side Support Bracket.
- Level and adjust Front Guard, then tighten all hardware at this time.
10. Re-install loops by inserting bolts removed in step 2. Tighten bolts at this time.

Optional Stainless Steel
Tow Hooks available,
manufacturers
Part # 10357
(Shown in this picture)

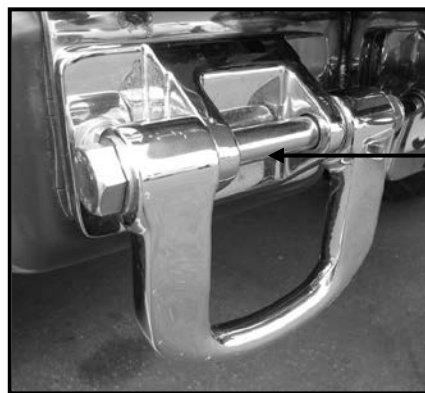

Remove this
factory bolt to get
to the mounting
bolts

Figure 1

**GRILLE GUARD WITH WINTCH MOUNT
06-10 HUMMER H3 / 09-10 HUMMER H3T**

