


**EXTREME HEAVY DUTY GRILLE GUARD
2010-22 TOYOTA 4RUNNER**

EXCLUDES 2020-ON TRD PRO, 2014-22 LIMITED, 2022 TRD SPORT, NIGHTSHADE MODELS

PARTS LIST:

1	Grille Guard	4	12mm Lock Washers
1	Driver/Left Frame Mounting Bracket	4	12mm Hex Nuts
1	Passenger/Right Frame Mounting Bracket	2	10-1.5mm x 30mm Hex Bolts
1	Driver/left Top Mounting Bracket (2010-13)	4	10mm x 30mm x 2.5mm Flat Washers
1	Passenger/right Top Bracket (2010-13)	2	10mm Nylon Lock Nuts
1	Driver/left Top Mounting Bracket (2014-on only)	2	8-1.25mm x 40mm Hex Bolts
1	Passenger/right Top Bracket (2014-on only)	4	8-1.25mm x 30mm Hex Bolts
2	Tube Spacers (2014-on)	12	8mm x 24mm OD x 2mm Flat Washers
4	12-1.75mm x 35mm Hex Bolts	4	8mm Nylon Lock Nuts
8	12mm x 37mm x 3mm Flat Washers	1	2.5mm Wrench

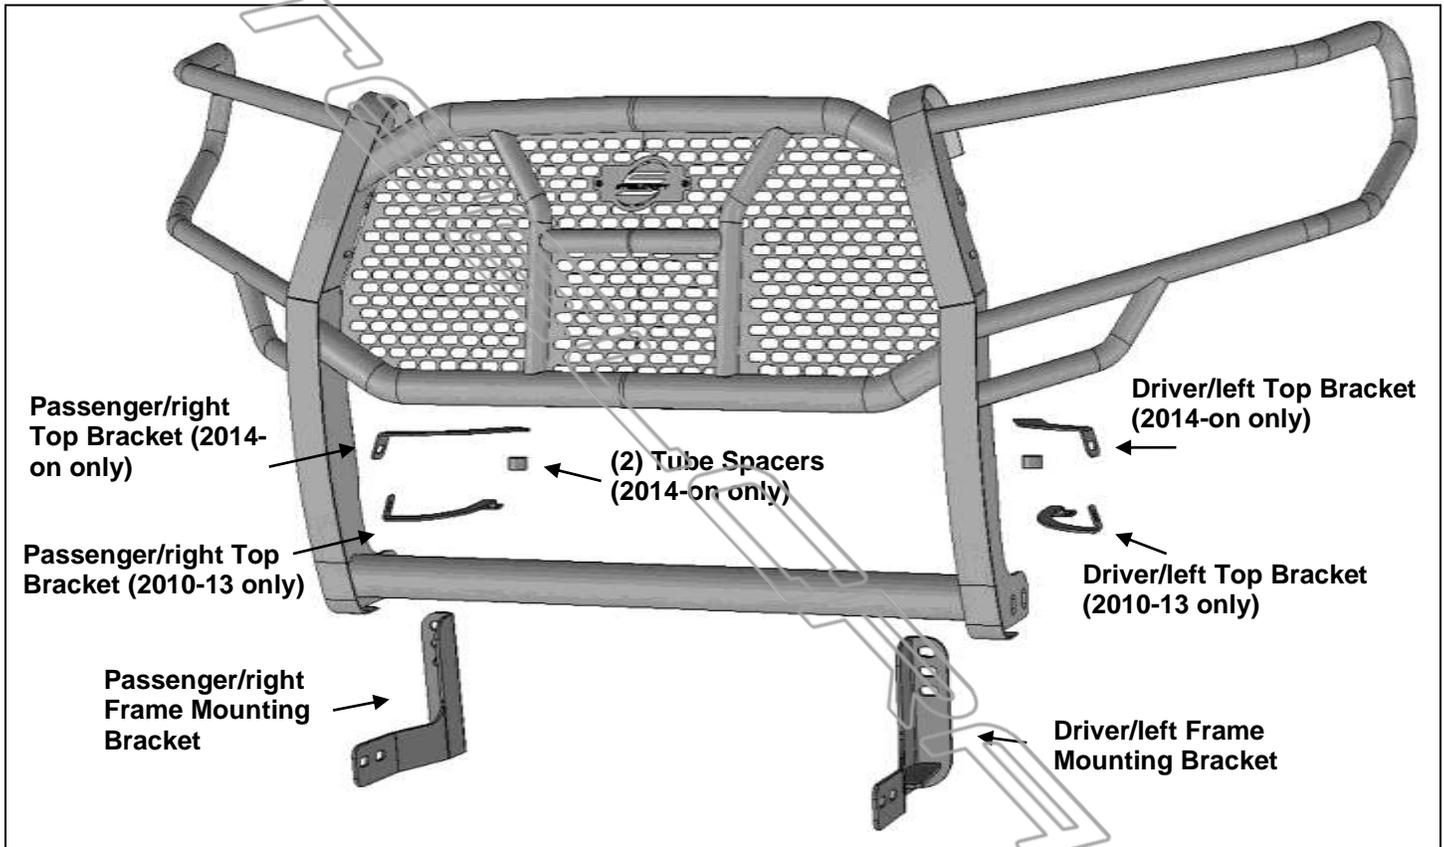

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. CUTTING MAY BE REQUIRED. INSTALLATION MAY INTERFERE WITH FRONT SENSORS.

1. Starting on the driver/left side, remove the (3) factory bumper mount bolts located on the outside of the driver side bumper mount, **(Figure 3)**. **NOTE:** It may be necessary to loosen but not remove, the front of the inner fender liners to access the bumper bracket bolts.

On 2010-13 models, remove the small driver/left and passenger/right side plastic splash guards, **(Figure 1)**. To make reinstallation easier, note the type and location of all factory fasteners. The plastic center splash guard may also be removed for access to hardware if necessary.

IMPORTANT: Apply a layer of masking tape to the openings in the bumper to protect the painted finish during bracket installation, **(Figure 2)**.

2. Select the driver/left side Frame Bracket, **(Figure 4)**. Reuse the (3) factory hex bolts to attach the Frame Bracket to the front of the bumper bracket, **(Figures 5 & 6)**. Snug but do not tighten hardware at this time.

**EXTREME HEAVY DUTY GRILLE GUARD
2010-22 TOYOTA 4RUNNER**

EXCLUDES 2020-ON TRD PRO, 2014-22 LIMITED, 2022 TRD SPORT, NIGHTSHADE MODELS
On **2010-13 models**, from behind the bumper, insert the mounting tab on the Bracket into the back of the bumper opening then rotate the Bracket up to the bumper bracket, **(Figure 5)**.

3. Repeat **Steps 1 & 2** for passenger/right side Frame Bracket installation.
4. Next, open the hood and remove the plastic cover between the top of the radiator and the grille, **(Figure 7)**. **NOTE:** Pay attention to the type and location of all factory hardware for easier reinstallation.
5. Select the correct Top Bracket installation for your model/year.

2010-13 Models:

- a. Remove the outer plastic clip attaching the bottom of the plastic grille to the top of the steel crossmember closest to the outer edge of the grille opening, **(Figure 8)**.
- b. Select the driver/left 2010-13 Top Bracket, **(Figure 9)**. Insert the Bracket through the opening in the grille directly above the hole in the crossmember, **(Figure 10)**.
- c. Attach the Top Bracket to the crossmember with (1) 8mm x 30mm Hex Bolt, (2) 8mm x 24mm x 2mm Flat Washers and (1) 8mm Nylon Lock Nut, **(Figures 9 & 10)**. Leave hardware loose.
- d. Repeat the previous **Steps** to attach the passenger/right side 2010-13 Top Bracket.

2014-on models:

- a. Remove the outer plastic clip attaching the grille to the top of the crossmember, **(Figure 11)**. Select the driver/left 2014-on Top Bracket and (1) Tube Spacer, **(Figure 12)**.
 - b. Insert the Bracket through the opening in the grille, **(Figure 13)**.
 - c. Place the Spacer over the crossmember. Attach the Bracket to the Spacer and crossmember with (1) 8mm x 40mm Hex Bolt, (2) 8mm Flat Washers and (1) 8mm Nylon Lock Nut, **(Figures 12—14)**. Make sure the Bracket clears the opening in the grille. If necessary, add an 8mm Flat Washer under the Tube Spacer for adjustment. Leave hardware loose.
 - d. Repeat the previous **Steps** to install the 2014-on passenger/right side Top Bracket, **(Figure 15)**.
6. Carefully unwrap the Grille Guard. With assistance, line up the bottom mounting tabs on the Grille Guard with the (2) previously installed Frame Brackets. Attach the Grille Guard to the outside of the Brackets with the included (4) 12mm x 35mm Hex Bolts, (8) 12mm Flat Washers, (4) 12mm Lock Washers and (4) 12mm Hex Nuts, **(Figures 16 & 17)**. Do not tighten hardware at this time.
 7. Carefully push the Grille Guard back toward the vehicle. Line up the Top Brackets with the appropriate mounting points on the Grille Guard.

2010-13 models: Attach the outer end of the driver/left Top Bracket to the lower mounting hole in the Grille Guard upright with (1) 8mm x 30mm Hex Bolt, (2) 8mm Flat Washers and (1) 8mm Nylon Lock Nut, **(Figure 18)**. Leave hardware loose at this time. Repeat this **Step** to attach the passenger/right side Top Bracket to the Grille Guard.


2014-on models: Attach the outer end of the driver/left Top Bracket to the upper hole in the Grille Guard upright with (1) 10mm x 30mm Hex Bolt, (2) 10mm Flat Washers and (1) 10mm Nylon Lock Nut, **(Figures 19 & 20)**. Leave hardware loose at this time. Repeat this **Step** to attach the passenger/right side Top Bracket to the Grille Guard.

8. Level and adjust the Grille Guard properly and tighten all hardware. **IMPORTANT:** Do not over-tighten the (2) 8mm Hex Bolts attaching the Top Mounting Brackets to the tab on the plastic grille and cross member or you may damage the grille.
9. On **2010-13 models** only, reinstall the plastic center splash guard using the factory hardware if removed in **Step 1**. Select the driver/left side plastic splash guard and hold it up in position against the bottom of the Mounting Bracket. Mark the area that needs to be removed from the splash guard to clear the Bracket. Check the location carefully and cut only the amount of plastic from the splash guard to clear the Bracket, **(Figure 21)**. Once the slot has been checked for clearance, reinstall the splash guard with the factory hardware. Repeat this **Step** to reinstall the passenger side splash guard.
10. On models with grille mounted sensor, remove the screen from the Grille Guard, **(Figure 22)**.
11. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Heavy Duty Grille Guard.


**EXTREME HEAVY DUTY GRILLE GUARD
2010-22 TOYOTA 4RUNNER**

EXCLUDES 2020-ON TRD PRO, 2014-22 LIMITED, 2022 TRD SPORT, NIGHTSHADE MODELS

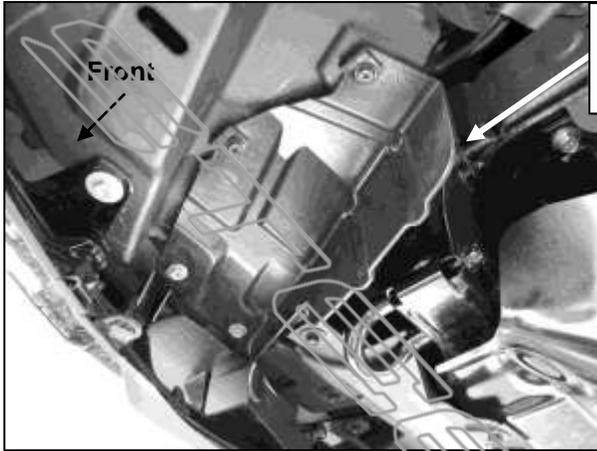


2010-13 models-
remove splash
guards

2010-13 models, use masking tape
to protect the bumper around
openings during Frame Bracket
installation

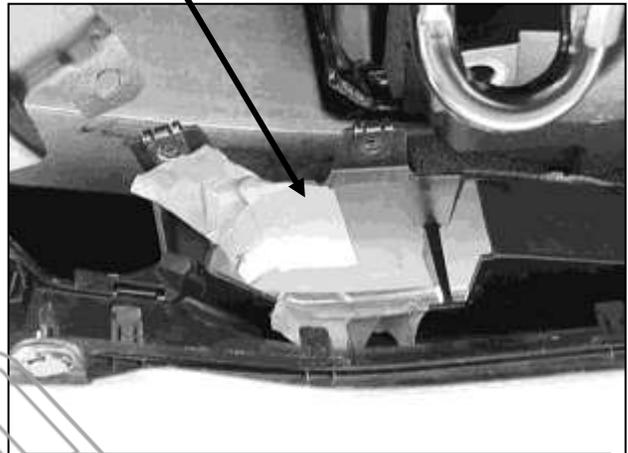


(Fig 1) Driver/left side pictured from below

(Fig 2) 2010-13 pictured from behind bumper

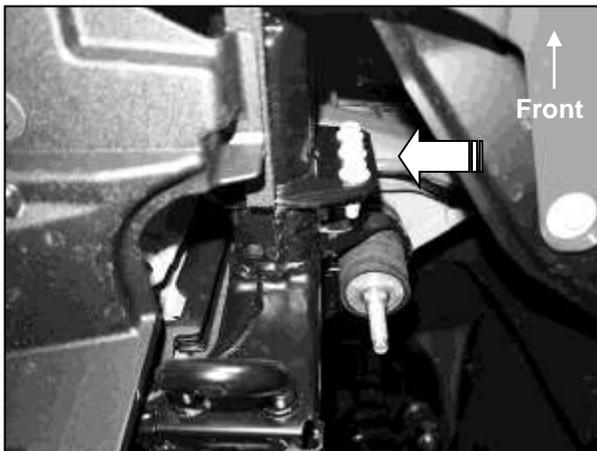


(Fig 3) Remove (3) factory bumper bracket
bolts (arrow-outer bolts only). 2014-on
Driver/left side pictured from below

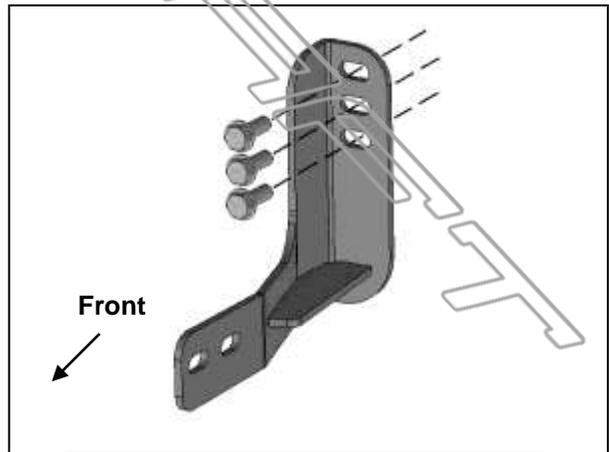

(Fig 4) Reuse the factory bolts to
attach driver/left Frame Bracket to
front of bumper bracket

**EXTREME HEAVY DUTY GRILLE GUARD
2010-22 TOYOTA 4RUNNER
EXCLUDES 2020-ON TRD PRO, 2014-22 LIMITED, 2022 TRD SPORT, NIGHTSHADE MODELS**

Driver/left Side Installation Pictured

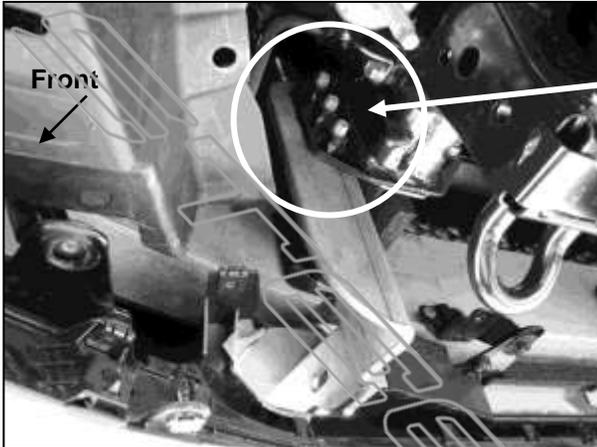

Reuse factory bolts to attach Frame Bracket to bumper bracket

Reuse factory hex bolts to attach Frame Brackets


(Fig 5) Driver/left side 2010-13 Bracket install pictured from behind bumper



(Fig 6) 2014-on passenger/right pictured




(Fig 7) Remove plastic cover (arrow)

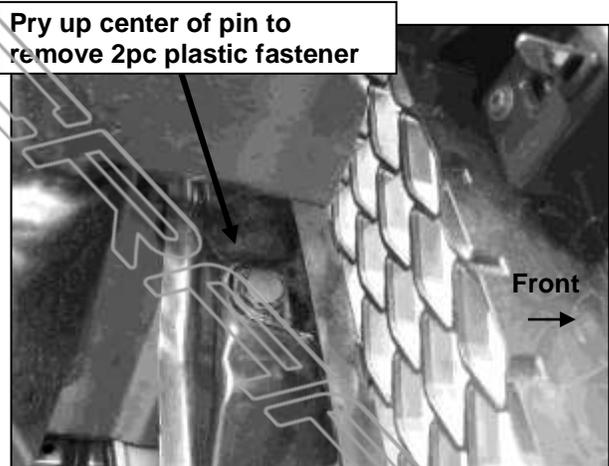

Pry up center of pin to remove 2pc plastic fastener

(Fig 8) 2010-13 driver/left side outer fastener on crossmember pictured from behind grille

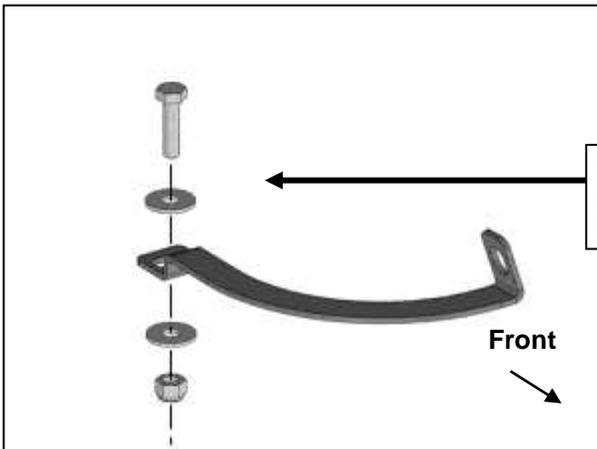


8mm x 30mm Hex Bolt
(2) 8mm Flat Washers
8mm Nylon Lock Nut

(Fig 9) 2010-13 driver/left side Top Bracket

**EXTREME HEAVY DUTY GRILLE GUARD
2010-22 TOYOTA 4RUNNER**


EXCLUDES 2020-ON TRD PRO, 2014-22 LIMITED, 2022 TRD SPORT, NIGHTSHADE MODELS

Driver/left Side Installation Pictured

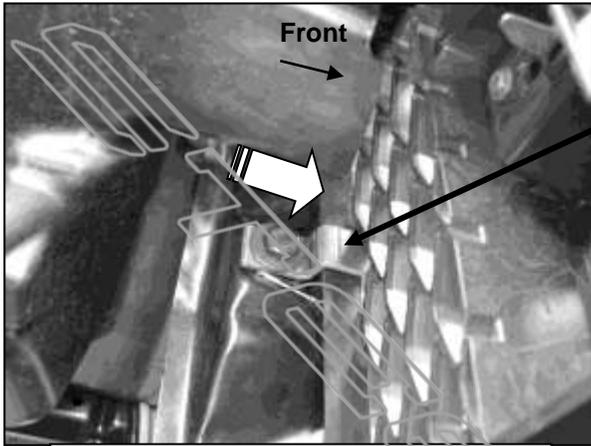


(Fig 10) 2010-13 Attach driver/left Top Bracket to top of cross member

**8mm x 30mm Hex Bolt
(2) 8mm Flat Washers
8mm Nylon Lock Nut**

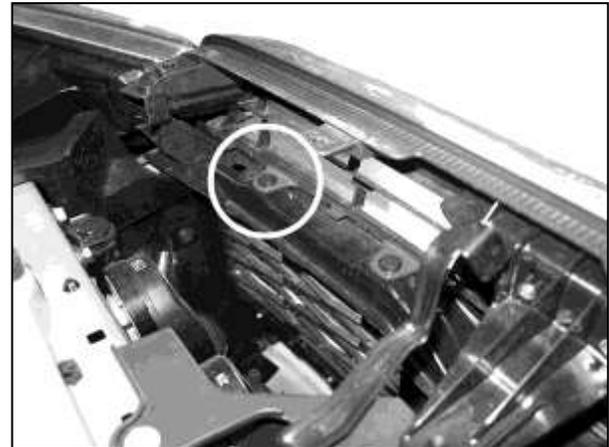


(Fig 11) 2014-on; Remove the driver side outer fastener (pictured from behind grille)

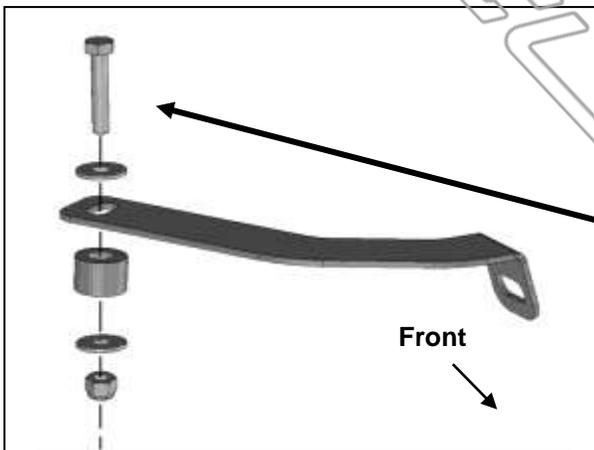

(Fig 12) 2014-on driver/left Top Bracket

**8mm x 40mm Hex Bolt
Spacer
(2) 8mm Flat Washers
8mm Nylon Lock Nut**

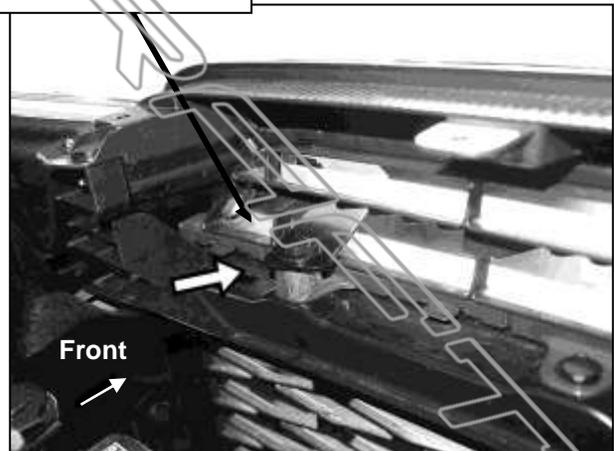


(Fig 13) 2014-on, attach driver/left Top Bracket with Spacer, to top of cross member



(Fig 14) 2014-on, driver/left Top Bracket installed


**EXTREME HEAVY DUTY GRILLE GUARD
2010-22 TOYOTA 4RUNNER
EXCLUDES 2020-ON TRD PRO, 2014-22 LIMITED, 2022 TRD SPORT, NIGHTSHADE MODELS**

Driver/left Side Installation Pictured

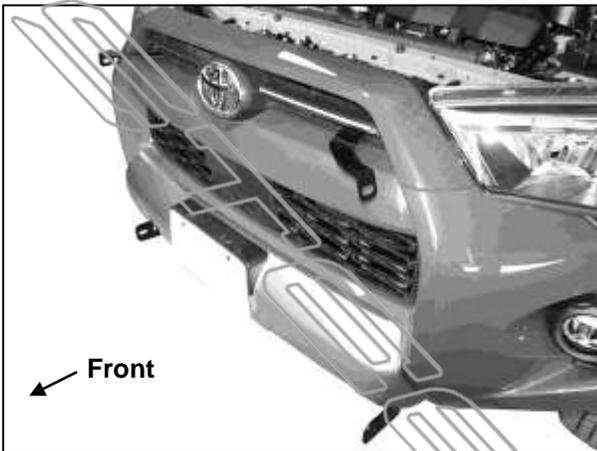


(Fig 15) Brackets installed, 2014-on pictured

- (2) 12mm x 35mm Hex Bolts
- (4) 12mm Flat Washers
- (2) 12mm Lock Washers
- (2) 12mm Hex Nuts

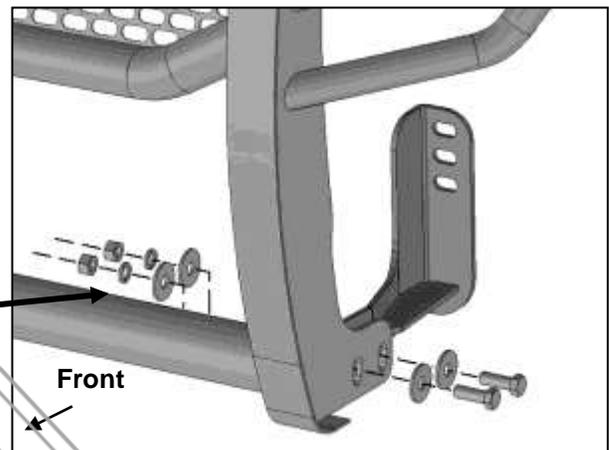


(Fig 16) Attach Grille Guard to outside of Frame Brackets (driver/left side illustrated)

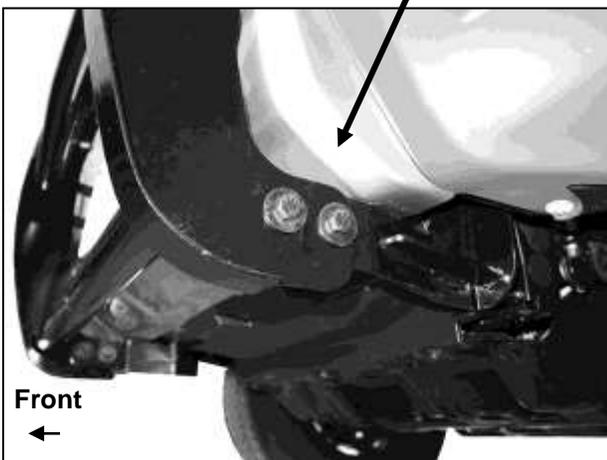

(Fig 17) Driver/left side of Grille Guard attached to Frame Brackets


- 8mm x 30mm Hex Bolt
- (2) 8mm Flat Washers
- 8mm Nylon Lock Nut

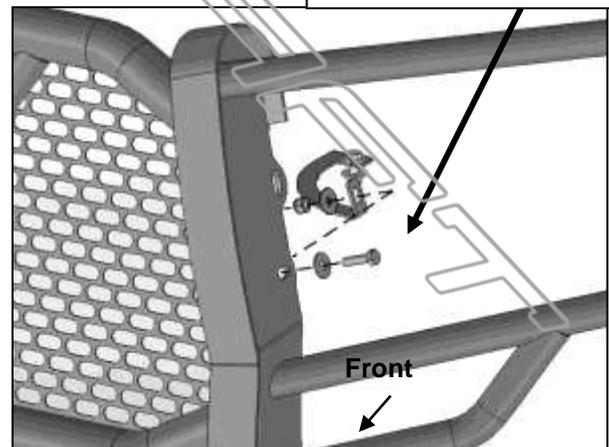

(Fig 18) Attach 2010-13 model driver/left side Top Bracket to lower hole in Grille Guard


**EXTREME HEAVY DUTY GRILLE GUARD
2010-22 TOYOTA 4RUNNER
EXCLUDES 2020-ON TRD PRO, 2014-22 LIMITED, 2022 TRD SPORT, NIGHTSHADE MODELS**

Driver/left Side Installation Pictured

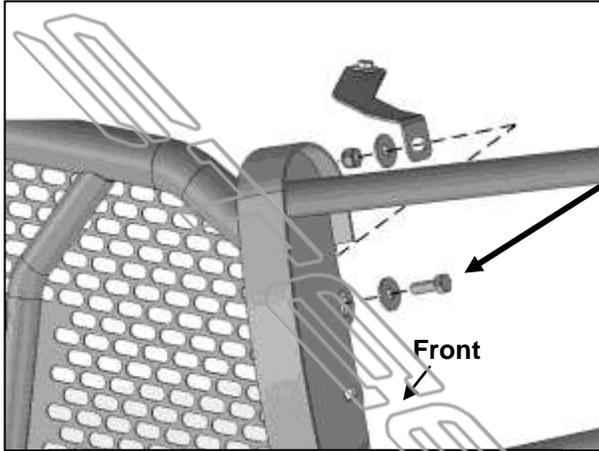

10mmx 30mm Hex Bolt
(2) 10mm Flat Washers
10mm Nylon Lock Nut


(Fig 19) Attach 2014-on driver/left Top Bracket to upper hole in Grille Guard

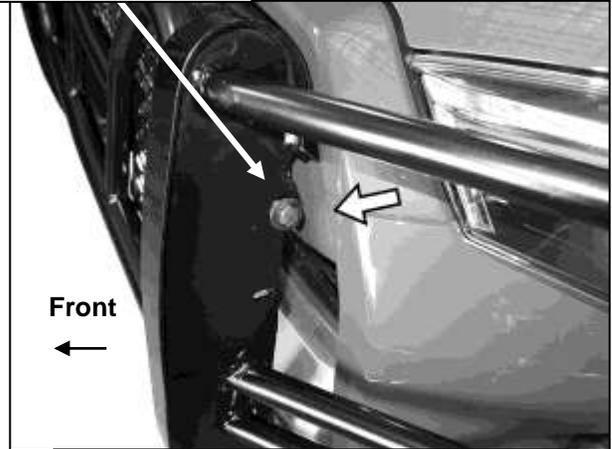

(Fig 20) Attach 2014-on driver/left Top Bracket to upper hole in Grille Guard



(Fig 21) 2010-13 model cut out area illustrated for example only

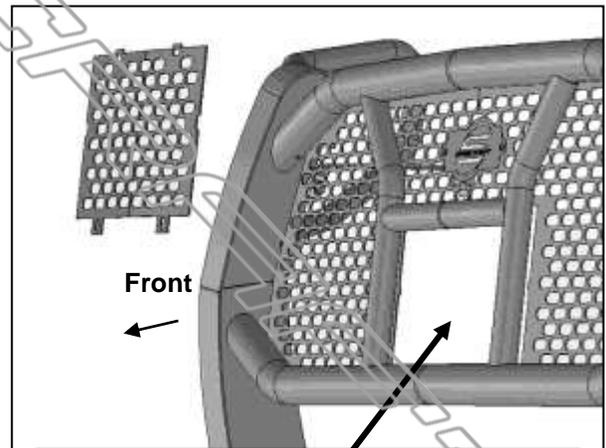

(Fig 22) Models with grille mounted sensor, remove screen from Grill Guard



Complete Installation