


PARTS LIST:

1	Driver/Left Sidebar	1	Passenger/Right Rear Mounting Bracket
1	Passenger/Right Sidebar	8	8mm x 25mm Hex Bolts
1	Driver/Left Front Mounting Bracket	1 2	8mm x 25mm Combo Bolts
1	Passenger/Right Front Mounting Bracket	1 2	8mm Lock Washers
1	Driver/Left Center Mounting Bracket	1 2	8mm x 24mm OD x 2mm Flat Washers
1	Passenger/Right Center Mounting Bracket	4	8mm Hex Nuts
1	Driver/Left Rear Mounting Bracket		

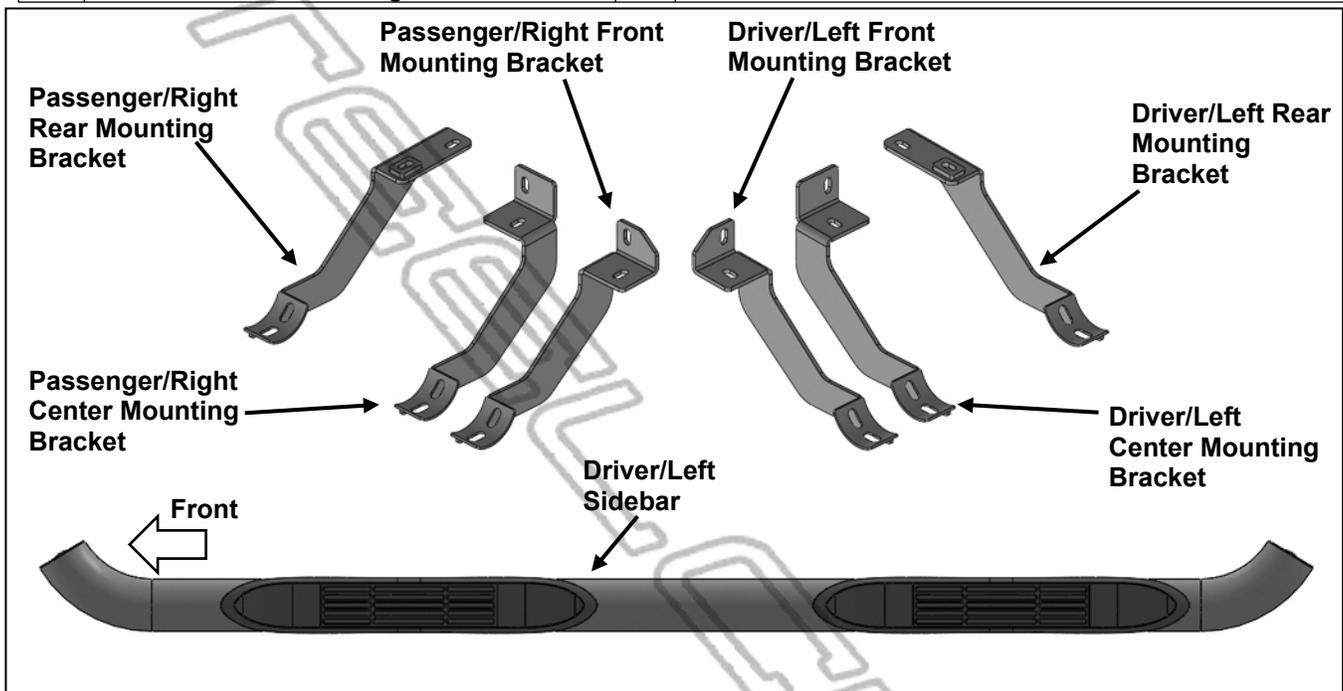


PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. USE ILLUSTRATION TO IDENTIFY BRACKETS.**
- Starting on the Driver/Left front of the vehicle, use pry tools to remove plugs and the cover on the bottom of the vehicle, **(Figure 1)**. Select the Driver/Left Front Mounting Bracket. Attach the Mounting Bracket to the threaded stud on the front location with (1) 8mm Flat Washer, (1) 8mm Lock Washer and (1) 8mm Hex Nut, **(Figures 2—4)**. Do not tighten hardware.
- Attach the Mounting Bracket to the threaded insert with (1) 8mm Hex Bolt, 8mm Lock Washer and (1) 8mm Flat Washer, **(Figure 2—4)**. Do not tighten hardware.
- Move along the body panel to the center mounting location, **(Figure 5)**. Select the Driver/Left Center Mounting Bracket. Repeat **Steps 2 & 3** to attach the Bracket, **(Figure 6)**. Do not tighten hardware.
- Continue to the rear mounting location in front of the rear tire, **(Figure 7)**. Select the Driver/Left Rear Mounting Bracket. Attach the Bracket to the (2) threaded inserts with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Figures 7—9)**. Do not tighten hardware.
- Unwrap the Driver/Left 3in Sidebar. With assistance, place the Sidebar onto the cradles of the (3) Mounting Brackets. **IMPORTANT:** Do not slide forward, backward or rotate or damage to the finish may result. Attach the Sidebar to the Mounting Brackets with (6) 8mm Combo Bolts, **(Figure 10)**. Do not tighten hardware.
- Level and adjust the Running Board and tighten all hardware.
- Select the factory cover. Line up the cover to the factory mounting holes. Mark where the Center Mounting Bracket sits. Using a hacksaw or sharp knife, cut the cover to allow the Bracket to go through. **(Figure 9)**. Only cut a little at a time.


9. Repeat **Steps 2—8** to attach the Passenger/Right 3in Sidebar.
10. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Running Boards.


Driver Side Installation Pictured

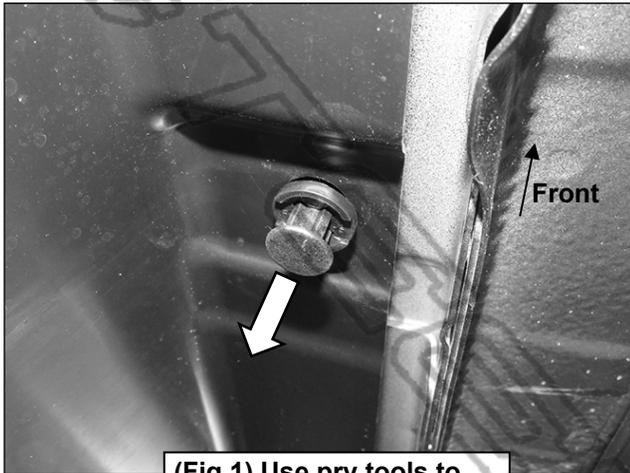

(Fig 1) Use pry tools to remove the plastic cover

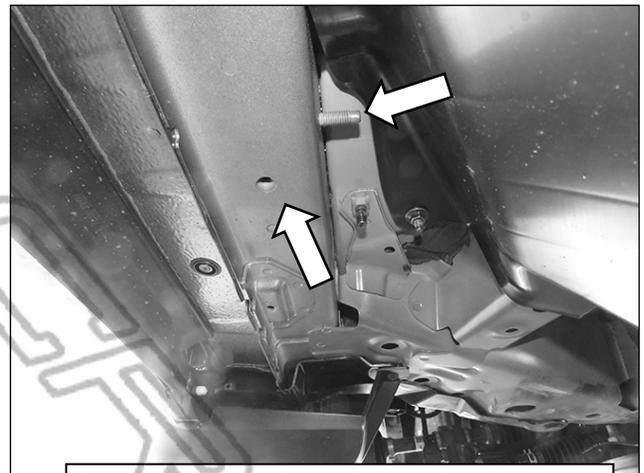

(Fig 2) Driver/Left front mounting location

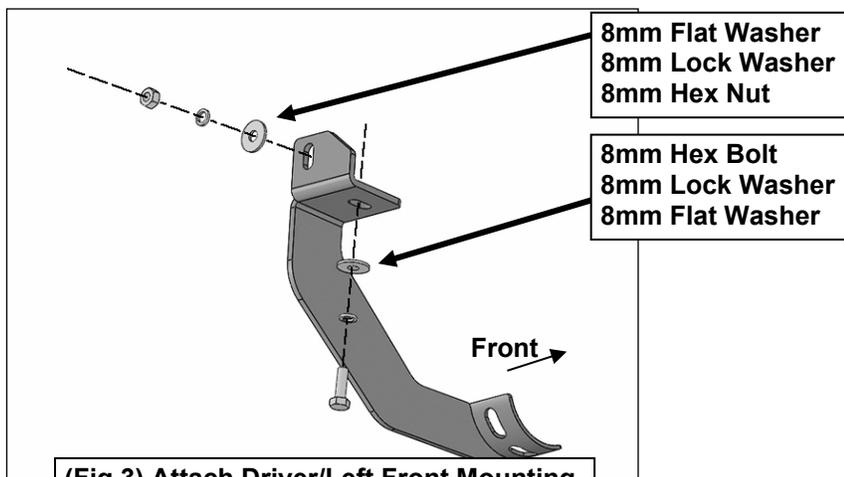


(Fig 3) Attach Driver/Left Front Mounting Bracket to the front mounting location


Driver Side Installation Pictured




(Fig 4) Driver/Left Front Mounting Bracket attached to the front mounting location

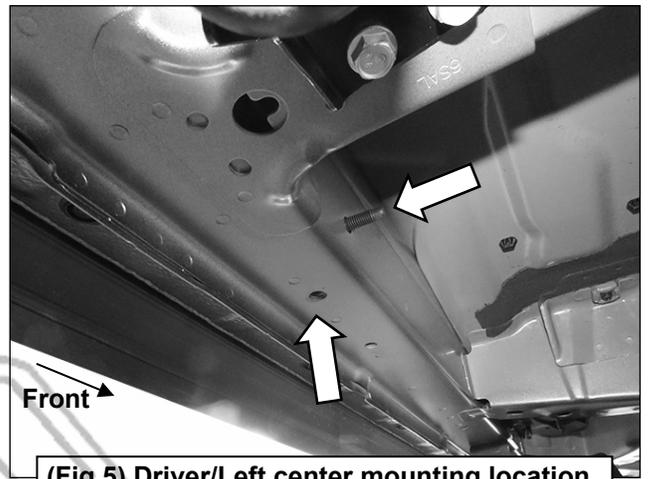

(Fig 5) Driver/Left center mounting location

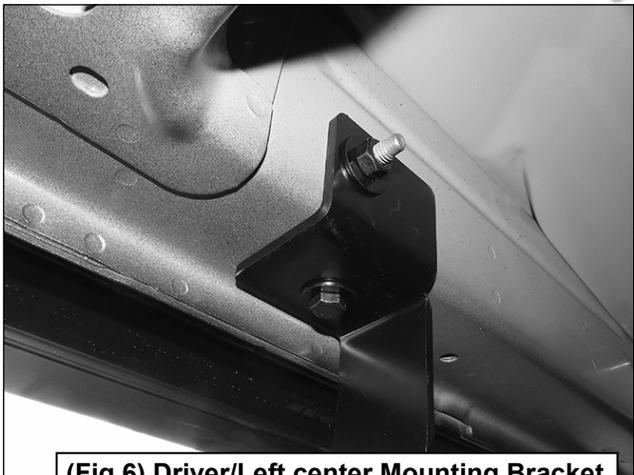


(Fig 6) Driver/Left center Mounting Bracket attached to the center mounting location

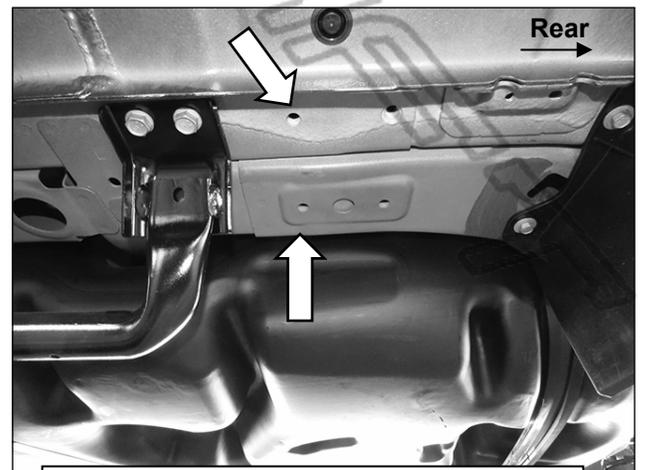


(Fig 7) Driver/Left rear mounting location


Driver Side Installation Pictured

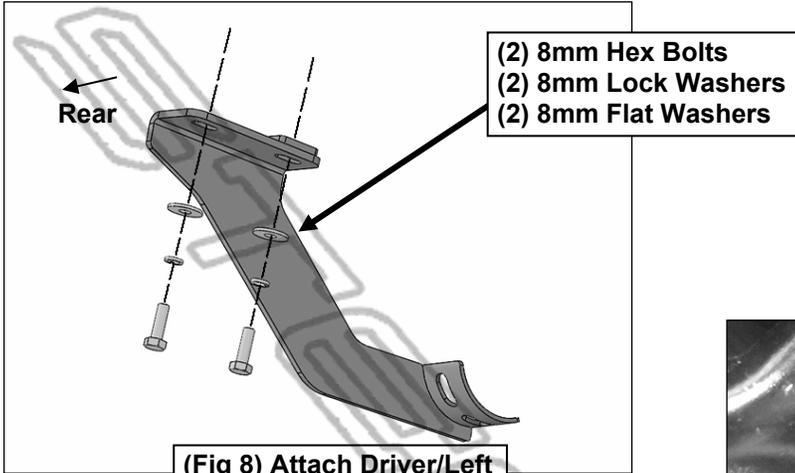


(Fig 8) Attach Driver/Left Rear Mounting Bracket

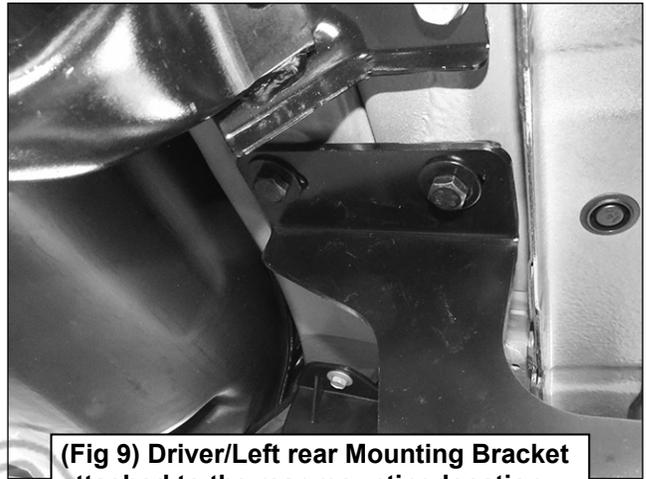

(Fig 9) Driver/Left rear Mounting Bracket attached to the rear mounting location

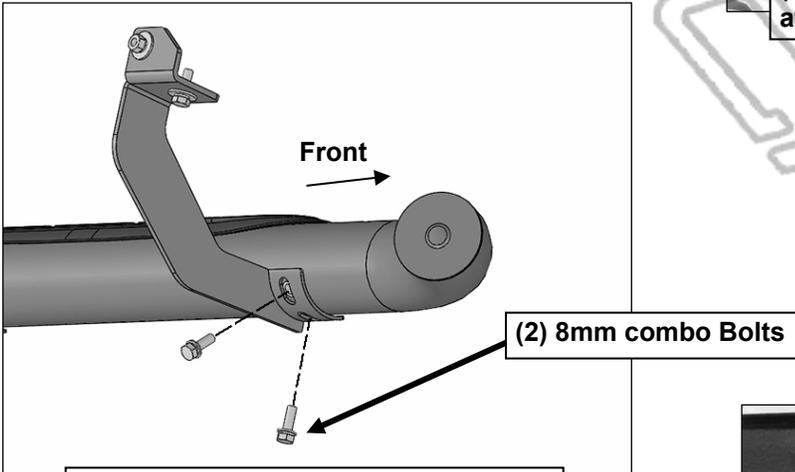

(Fig 10) Attach the Driver/Left Sidebar to the (3) Mounting Brackets

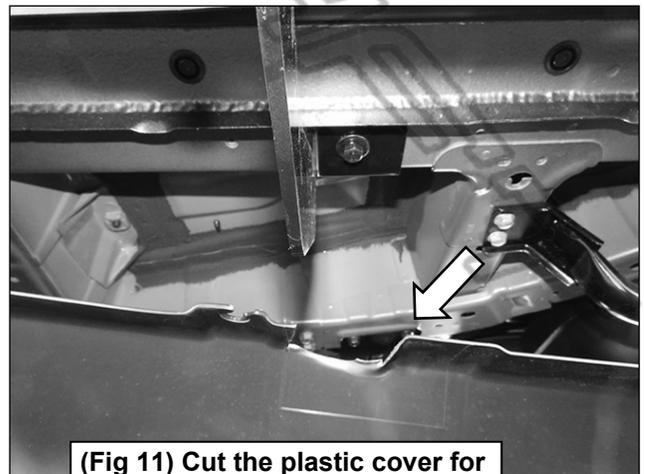

(Fig 11) Cut the plastic cover for the Center Mounting Bracket